






 













 







 

 







Original	Replacement
 Power	 Power
 Open/Close	 Eject
 VCR	 Smart
 DVD	 Media
 Input	 AV
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 D. Menu
 Clear	 Exit

Original	Replacement
 Setup	 Options
 Display	 Info
 Title/PBC	 Back
 Menu	 Menu
 Up/PR+	 Up
 Down/PR-	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Subtitle	 Subt
 Audio	 Dual
 Search	 Shift + TV/R
 Zoom	 Shift + Eject
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>





	Original	Replacement		Original	Replacement
	I<<	 I<<			
	Stop	 Stop			
	>>I	 >>I			
	Rec	 Rec			
	Speed	 Format			
	Repeat	 Text			
	A-B	 Red			
	Tv/VCR	 TV/R			
	3D	 3D			
	Mark	 List			
	Angle	 Guide			
	CM Skip	 Yellow			
	Replay	 Green			
	Last CH	 Pre Ch			
	Program	 Sleep			

