


 

 





















 

 














Original	Replacement	Original	Replacement
 Power	 Power	 Prog-	 Ch -
 Audio	 Dual	 Vol+	 Vol +
 Tv/VCR	 TV/R	 Vol-	 Vol -
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0/AUX	 0		
 X/0000	 Exit		
 Timer	 AV		
 'I'	 Format		
 Prog+	 Ch +		





Original	Replacement	Original	Replacement
	Power		Power
	Tv/VCR		TV/R
	Audio		Dual
	Review		Smart
	---		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AUX		0
	X/0000		Exit
	Timer		AV
	Prog		Sleep
	Timer/?		Subt
	'/'		Format
	30Sec >>		3D
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Rec		Rec
	Pause		Pause
	OK		Ok
	Menu		Menu
	Up/Tv Prog+		Up
	Down/Tv Prog-		Down
	Right/>>I/+		Right
	Left/I<<-		Left
	Start Debut+		Red





