























 



















 
 











Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I-II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide / EPG / -/-
 P<P	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Replacement
 Info	 Info / Angle
 Left	 Left
 Up	 Up
 P+	 CH+ / Page+
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Vol-	 Vol-
 Vol+	 Vol+
 Red/Sound	 Red / Netflix / Search
 Red/Sound	 Sound / Title
 Green/Picture	 Green / APP / Repeat
 Green/Picture	 Picture / Format
 Yellow/Feature	 Yellow / YouTube / Repeat
 Blue/Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS





Original	Replacement
	GOTO TEXT Text / Goto
	SHIFT + GOTO TEXT Shift + Text /
	TIMER SLEEP Sleep / Timer
	HOLD Stop / Hold
	OPT-TOOLS SETUP Setup / OPT /
	SIZE ZOOM Zoom / Size
	LIST SMART Smart / List
	MEDIA DISPLAY Display / Media

Original	Replacement

