





| Original | | Replacement | | Original | | Replacement | |
|----------|--------------|-------------|------------------------|----------|------------|-------------|-----------------------|
| | Power | | Power | | 4 | | 4 |
| | VIDEO | | Red / Netflix / Search | | 5 | | 5 |
| | Sleep | | Sleep / Timer | | 6 | | 6 |
| | Tuner Band | | TV/Radio / | | 7 | | 7 |
| | P.Call Down | | Shift + Down | | 8 | | 8 |
| | P.Call Up | | Shift + Up | | 9 | | 9 |
| | Changer CD 1 | | Shift + 1 | | 0 | | 0 |
| | Changer CD 2 | | Shift + 2 | | +10 | | Guide / EPG / -/- |
| | Changer CD 3 | | Shift + 7 | | I<< | | I<< / Preset- |
| | Changer CD 4 | | Shift + 4 | | >>I | | >>I / Preset+ |
| | Changer CD 5 | | Shift + 8 | | Stop | | Stop / Hold |
| | Changer CD 6 | | Shift + 9 | | Play/Pause | | Play / Slow |
| | P | | OK | | Repeat | | Green / APP / Repeat |
| | P.Open/Close | | Eject / Surround | | Clear | | Exit / Cancel / Clear |
| | 1 | | 1 | | Check | | Shift + OK |
| | 2 | | 2 | | Edit | | Text / Goto |
| | 3 | | 3 | | P.Mode | | Picture / Format |









 


| Original | Replacement |
|---|---|
|  AI Auto Focus |  Info / Angle |
|  Up |  Up |
| Presence |  Setup / OPT / |
|  AI/Loudness |  Audio / Lang I/II |
| Left |  Left |
| EQ.Effect |  D.Menu / Top |
| Right |  Right |
|  Off |  Shift + Mute / Dimmer |
|  M.Call |  Back / Return |
|  Down |  Down |
|  Display |  Display / Media |
|  S.W.Power |  Shift + Power |
|  S.W.Effect |  Shift + D.Menu / Top Menu |
|  S.W.Vol- |  Shift + Vol- |
|  S.W.Vol+ |  Shift + Vol+ |
|  Mute |  Mute / Dimmer |
|  LD/AUX |  AV / Input / RDS |

| Original | Replacement |
|--|---|
|  Tape |  Shift + 5 |
|  Tuner |  Shift + 6 |
|  CD |  Shift + 3 |
|  Volume Control - |  Vol- |
|  Volume Control + |  Vol+ |
















 
 
 


| Original | Replacement | Original | Replacement |
|----------------|---|-----------------------|-------------|
| Power ON/Off |  | Power | |
| Mute |  | Mute / Dimmer | |
| CD Play |  | Play / Slow | |
| CD Pause |  | Pause / Step / Freeze | |
| Stop |  | Stop / Hold | |
| CD Rewind |  | << / Tune- | |
| CD F.FWD |  | >> / Tune+ | |
| Prev./Prog- |  | << / Preset- | |
| Next/Prog+ |  | >> / Preset+ | |
| Tape 2 Pre./eq |  | Subtitle / EQ | |
| Fm Mode/Disc |  | Eject / Surround | |
| Edit |  | Zoom / Size | |
| Sleep |  | Sleep / Timer | |
| Program |  | TV/Radio / | |
| Every Pop |  | D.Menu / Top | |
| Funct./Direct |  | Setup / OPT / | |
| Woofers/Speed |  | Text / Goto | |

| Original | Replacement | Original | Replacement |
|------------------|---|-----------------------|-------------|
| Input/Source |  | AV / Input / RDS | |
| Mode |  | Menu / Home | |
| Tape 1 Preset |  | Up | |
| CD/Theater |  | Info / Angle | |
| Tape 1 Hall/Ats |  | Left | |
| Center |  | OK | |
| Tape 2 REC./Jazz |  | Right | |
| Clear |  | Exit / Cancel / Clear | |
| Preset Pause |  | Down | |
| Volume+ |  | Vol+ | |
| Band |  | Smart / List | |
| Vol Rs+/S.Mode |  | CH+ / Page+ | |
| Volume- |  | Vol- | |
| Display |  | Display / Media | |
| Vol Rs-/Effect |  | CH- / Page- | |
| Pr 1 |  | 1 | |
| Pr 2 |  | 2 | |





| Original | Replacement | Original | Replacement |
|---------------|--|----------|-------------|
| Pr 3 |  3 | | |
| Pr 4 |  4 | | |
| Pr 5 |  5 | | |
| Pr 6 |  6 | | |
| Pr 7 |  7 | | |
| Pr 8 |  8 | | |
| Pr 9 |  9 | | |
| +10/Next Sv+V |  Guide / EPG / -/-- | | |
| Pr 0/10 |  0 | | |
| Repeat |  Green / APP / Repeat | | |
| CD Random |  Blue / Prime Video / Random | | |
| Tape 1 Play |  Shift + Play / | | |
| Tape 1 Stop |  Shift + Stop / | | |
| Tape 1 Rec |  Shift + Rec / Rec Mode | | |
| Tape 1 Rew |  Shift + << / | | |
| Tape 1 F.FWD |  Shift + >> / | | |

