



Original	Replacement	Original	Replacement
 Power	 Power	 Green / Slow	 Green
 I<<	 I<<	 Yellow / Repeat	 Yellow
 >>I	 >>I	 Blue / A-B	 Blue
 <<	 <<	 CH +	 Ch +
 >>	 >>	 CH -	 Ch -
 Eject	 Eject	 TV Menu	 Menu
 Play / Pause	 Play	 Source	 AV
 Play / Pause	 Pause	 Vol +	 Vol +
 Stop	 Stop	 Vol -	 Vol -
 TV/TXT /	 Text	 DTV	 Smart
 Cancel / Zoom	 Shift + Eject	 DVD-Setup	 D. Menu
 Reveal / Subtitle	 Shift + Subt	 Up	 Up
 Hold / Menu	 Options	 Down	 Down
 Size / Angle	 Format	 Right	 Right
 Subpage / Title	 Shift + Text	 Left	 Left
 Index / Goto	 Media	 OK	 Ok
 Red / Program	 Red	 Exit	 Exit





Original	Replacement
Display	SHIFT + DISPLAY INFO Shift + Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT + -/-- GUIDE Shift + Guide
Recall	RETURN BACK Back
Picture	SHIFT + PICTURE FORMAT Shift + Format
Sound	SOUND DUAL Dual
Nicam/A2	SHIFT + TIMER AV Shift + AV
Mute	MUTE Mute

Original	Replacement
Sleep	PROG SLEEP Sleep
Info	DISPLAY INFO Info
Subtitle	AD SUBT Subt
Channel List	DISC NAV LIST List
EPG	-/-- GUIDE Guide
TV / Radio	SEARCH TV/R TV/R
FAV	FAV PRE-CH Pre Ch

