 




 

 

 
 

 
 
 
 

 

 
 
 
 

 
 


 










 
 

Original	Replacement
 Power	 Power
 Fav	 Pre Ch
 TV	 TV/R
 Input	 AV
 Zoom +	 Shift + Up
 Zoom -	 Shift + Down
 Sleep	 Sleep
 Text	 Text
 SSM	 Shift + Smart
 PSM	 Media
 I/II	 Dual
 Menu	 Menu
 ARC	 Smart
 Exit	 Exit
 Up	 Up
 Right	 Right
 Down	 Down

Original	Replacement
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol +	 Vol +
 Vol -	 Vol -
 PR +	 Ch +
 PR -	 Ch -
 Mute	 Mute
 List	 List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5









 

 








 






 



 

 

 
 

 
 
Original	Replacement
 Power DVD	 Power
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

 

 


 

 
 

 
 
 





 



 

 


 
 

 

 

Original	Replacement
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<
 >>	 >>
 >>	 >>
  <<	  <<
 Power Audio	 Shift + Power
 Vol+ Audio	 Vol +
 Vol- Audio	 Vol -
 Mute Audio	 Mute







Original	Replacement
 Power STB	 Power
 Input STB	 AV
 Menu STB	 Menu
 Up STB	 Up
 OK STB	 Ok
 Down STB	 Down
 Right STB	 Right
 Left STB	 Left
 Vol+ STB	 Vol +
 Vol- STB	 Vol -
 Mute STB	 Mute
 PR+ STB	 Ch +
 PR- STB	 Ch -
 1 STB	 1
 2 STB	 2
 3 STB	 3
 4 STB	 4

Original	Replacement
 5 STB	 5
 6 STB	 6
 7 STB	 7
 8 STB	 8
 9 STB	 9
 0 STB	 0
 Power Cable	 Shift + Power
 Menu Cable	 Shift + Menu
 Up Cable	 Shift + Up
 OK Cable	 Shift + Ok
 Down Cable	 Shift + Down
 PR+ Cable	 Shift + Ch +
 PR- Cable	 Shift + Ch -
 Vol+ Cable	 Shift + Right
 Vol- Cable	 Shift + Left
 Mute Cable	 Shift + Mute
 1 Cable	 Shift + 1



