











 


 
 


 








 

 















 





 

 



 



 





 
 




















Original	Replacement	Original	Replacement
 Goto	 Text / Goto	 Prog	 TV/Radio /
 Open / Close	 Eject / Surround	 Shuffle	 Blue / Prime Video / Random
 1	 1	 N/P	 D.Menu / Top
 2	 2	 Repeat	 Green / APP / Repeat
 3	 3	 Repeat A-B	 Yellow / YouTube / Repeat
 4	 4	 Title	 Sound / Title
 5	 5	 Subtitle	 Subtitle / EQ
 6	 6	 Setup	 Setup / OPT /
 7	 7	 Up	 Up
 8	 8	 Display	 Display / Media
 9	 9	 Left	 Left
 0	 0	 Enter	 OK
 +10	 Guide / EPG / -/--	 Right	 Right
 Step	 Shift + Pause / Step /	 Menu	 Menu / Home
 Slow	 Shift + Play /	 Down	 Down
 Zoom	 Zoom / Size	 Return	 Back / Return
 Angle	 Info / Angle	 Vol+	 Vol+





Original	Replacement
 Mute	 Mute / Dimmer
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Vol-
	 Audio / Lang I/II
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze

Original	Replacement

