



Original	Replacement	Original	Replacement
 TV Power	 Shift + Power	 Mute	 Mute / Dimmer
 TV Input	 Shift + AV / Input / RDS	 CH+ / PG+	 CH+ / Page+
 Power	 Power	 Vol-	 Vol-
 Guide	 Guide / EPG / -/--	 CH- / PG-	 CH- / Page-
 Menu	 Menu / Home	 R	 TV/Radio /
 Text	 Text / Goto	 R	 Shift + Green / APP /
 Aspect	 Picture / Format	 Pause	 Pause / Step / Freeze
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 Subtitle	 Subtitle / EQ	 << / Tune-	 << / Tune-
 Back	 Back / Return	 Play	 Play / Slow
 Up	 Up	 >> / Tune+	 >> / Tune+
 Info	 Info / Angle	 I< Replay	 I<< / Preset-
 Left	 Left	 >I Skip	 >>I / Preset+
 OK	 OK	 Source	 AV / Input / RDS
 Right	 Right	 1	 1
 Down	 Down	 2	 2
 Vol+	 Vol+	 3	 3





Original	Replacement	Original	Replacement
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
X CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
0	0	HDMI - BAT 0	0
✓ ENTER	Enter	PC FAV MARKER	Fav / Marker / PC
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random

Original	Replacement

