 

 





 
 
 
 
 

 

 
 

 


 

 

 
 

 



 



 



 

 

 

 
 

 







 


 

 

 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	[i+]		Info
	[II]		Options
	[<< >>]		3D
	Back		Back
	Tv/DTV		TV/R
	Pr+		Ch +
	Pr-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Source		AV
	Return		Shift + Back
	Home		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Exit		Exit
	EPG		Guide
	Red/Rec		Red
	Green/Pause		Green






 


 



 

 
 
 
 
 
 
 
 
 
 



 









 
 

 

 


 
 

 

 



 
 









 
 
 




Original	Replacement	Original	Replacement
Yellow/Stop	Yellow		
Blue/Play	Blue		
[...]	Subt		
[≡?]	Eject		
[≡i]	List		
Text	Text		
HDMI Control	Smart		
I-II	Dual		
[> <]	Sleep		
Size [<>]	Format		
1 Input 1	Shift + 1		
2 Input 2	Shift + 2		
3 Input 3	Shift + 3		
4 Input 4	Shift + 4		
INPUT 5 Input 5	Shift + 5		



 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 


 
 










 


 





 









 
 
 
 
 

 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Source		AV
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	DVD Top		D. Menu
	Return		Back
	Play		Play
	Stop		Stop
	Pause		Pause
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	HDMI Control		Smart
	Input 1		Shift + 1
	Input 2		Shift + 2



 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 








 

 












 



 
 
 
 
 

 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	[i+]		Info
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	PR+		Ch +
	PR-		Ch -
	Menu		Menu
	Exit		Exit
	DVD Top Menu		D. Menu
	HDMI Control		Smart
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PC		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Mute		Mute
	Play		Play
	Stop		Stop
	Pause		Pause
	Rec		Rec
	>>		>>
	<<		<<
	HDMI Control		Smart
	Input 1		Shift + 1
	Input 2		Shift + 2
	Input 3		Shift + 3
	Input 4		Shift + 4
	Input 5		Shift + 5

