




 
 
 
 
 
 

 
 
 
 
 
 
 

 
 


 





 

 






Original	Replacement
 Standby / On	 Power
 INPUT NEXT	 Ch +
 INPUT PREV.	 Ch -
 D.Access	 Red
 PQLS	 3D
 BD	 Shift + 1
 DVD	 Shift + 2
 BDR / BDR	 Shift + 3
 HDMI	 Shift + 4
 TV	 Shift + 5
 CD	 Shift + 6
 NET	 Shift + 7
 ADPT	 Shift + 8
 iPod / USB	 Shift + 9
 SAT / CBL	 Shift + Guide
 TUNER	 Shift + 0
 i / Status	 Info

Original	Replacement
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Audio	 Media
 Video	 Smart
 Tools Menu	 Options
 Home Menu	 Menu
 iPod Ctrl.	 D. Menu
 Return	 Back
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Features PHASE	 Shift + 3D
 MPX	 Shift + Pause
 Pause	 Pause





Original	Replacement	Original	Replacement
BAND	+ Shift + Play	3	3
Play	Play	4	4
PTY	+ Shift + Stop	Signal Sel.	AV
Stop	Stop	MCACC	Eject
Preset -	+ Shift + I<<	5	5
I<<	I<<	6	6
Preset+	+ Shift + >>I	CH. Level	Guide
>>I	>>I	7	7
Tune-	+ Shift + <<	Speakers	List
<<	<<	Dimmer	Blue
Tune+	+ Shift + >>	8	8
>>	>>	9	9
Auto / ALC /	TV/R	Sleep	Sleep
1	1	0	0
Standard	Format	Class	Yellow
2	2	DISP	+ Shift + Info
Adv. Surr.	Subt	+ Favorite	Pre Ch





Original	Replacement	Original	Replacement
Favorite Audio	SOUND Dual		
AUTO S.RTRV	CLEAR Exit		
Repeat	Shift + Text		
Shuffle	Text		

