 



 






 
 

 










 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		Recall		Back
	Mute		Mute		Text		Text
	Red		Red		Subtitle		Subt
	Blue/Pause		Blue		USB		AV
	Green		Green		Menu		Menu
	Yellow		Yellow		Exit		Exit
	Audio		Dual		EPG		Guide
	Zoom		Eject		FAV		Pre Ch
	Info		Info		Up		Up
	<<		<<		Down		Down
	>>		>>		Right		Right
	I<<		I<<		Left		Left
	>>I		>>I		OK		Ok
	Play		Play		Find		Options
	Stop		Stop		SAT		Format
	Rec		Rec		HDMI		Smart
	Pause		Pause		F1		Media





Original		Replacement		Original		Replacement	
	Page+		Ch +				
	Page-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Sleep		Sleep				
	TV/Radio		TV/R				

