















 

















 












 








 






 








Original		Replacement		Original		Replacement	
	Power		Power		>>		>>  / Preset+
	Function Tv		AV / Input / RDS		<<		<< / Tune-
	Eject		Eject / Surround		>>		>> / Tune+
	Sleep		Sleep / Timer		Stop		Stop / Hold
	1/RDS Display		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3/TA		3		Vol+		Vol+
	4/PTY-		4		Mute		Mute / Dimmer
	5/PTY Search		5		Tuning/CH+		Shift + >> /
	6/PTY+		6		Tuning/CH+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		Repeat		Shift + Green / APP /
	9		9		Tuning/CH-		CH- / Page-
	PL II		Audio / Lang I/II		Tuning/CH-		Shift + << /
	0		0		Disc Menu		D.Menu / Top
	DSP/EQ		Subtitle / EQ		Menu		Menu / Home
	I<<		I<< / Preset-		Title Menu		Sound / Title









Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause / Step / Freeze
 Function Tv	 AV / Input / RDS	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Mute	 Mute / Dimmer
 1	 1	 CH+ / Page+	 CH+ / Page+
 2	 2	 Vol-	 Vol-
 3	 3	 CH- / Page-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Info	 Info / Angle
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 0	 0	 Right	 Right
 <<<	 <<< / Tune-	 Return	 Back / Return
 >>>	 >>> / Tune+	 Down	 Down
 Stop	 Stop / Hold	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Red	 Red / Netflix / Search



