



Original	Replacement
POWER	Power
INFO	Info / Angle
HDMI CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Setup / OPT /
1	1
2	2
3	3
ZOOM/RED/▲	Zoom / Size
ZOOM/RED/▲	Shift + CH+ /
ZOOM/RED/▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT/GREEN/▼	Shift + CH- / Page-

Original	Replacement
REPEAT/GREEN/▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT/YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE/BUE	Sound / Title
TITLE/BUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK/SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Replacement	Original	Replacement
	V-		Vol-
	V+		Vol+
	FAV		Fav / Marker / PC
	LANG		Audio / Lang I/II
	SUBTITLE		Subtitle / EQ
	MUTE		Mute / Dimmer
	SWAP/↔	+	Shift + Back / Return
	EPG		Guide / EPG / -/-
	[*] / [··]		D.Menu / Top
	TEXT		Text / Goto
	C		Exit / Cancel / Clear
	DISPLAY		Display / Media
	ANGLE	+	Shift + Info / Angle
	SEARCH MODE	+	Shift + Red / Netflix /
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	PLAY		Play / Slow

Original	Replacement	Original	Replacement
	PAUSE		Pause / Step / Freeze
<< button"/>	<<		<< / Tune-
>> button"/>	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

