








 




 

 


 

 

 

 

 





 



 









 

 


 

 













Original	Replacement	Original	Replacement
 Power	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Vol+	 Vol +
 HDD	 Media	 Vol-	 Vol -
 DVD	 Smart	 O))	 Dual
 1	 1	 [...]	 Subt
 2	 2	 Camera	 Yellow
 3	 3	 Tv/DVD	 TV/R
 4	 4	 Timer	 Shift + AV
 5	 5	 Display	 Info
 6	 6	 Time/Text	 Text
 7	 7	 System Menu	 D. Menu
 8	 8	 Title List	 Blue
 9	 9	 Tools	 Options
 0	 0	 Return	 Back
 Clear	 Exit	 Up	 Up
 Set	 Red	 Down	 Down
 Prog+	 Ch +	 Right	 Right






 





 











 














Original	Replacement	Original	Replacement
			AV
			Format
			Pre Ch
			List
			Guide







 







 

 

 
 
 
 



 

 










 




 





 
 
 
 






 




Original	Replacement
 Power	 Power
 Tv/DVD	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Text	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 [i+]	 Info
 Fav	 Pre Ch
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down






 









 



 

 


 
 

 


 
 






 








Original	Replacement	Original	Replacement
 Power	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Vol+	 Vol +
 HDD	 Media	 Vol-	 Vol -
 DVD	 Smart	 O))	 Dual
 1	 1	 [...]	 Subt
 2	 2	 Camera	 Yellow
 3	 3	 Tv/DVD	 TV/R
 4	 4	 Timer	 Shift + AV
 5	 5	 Display	 Info
 6	 6	 Time/Text	 Text
 7	 7	 System Menu	 D. Menu
 8	 8	 Title List	 Blue
 9	 9	 Tools	 Options
 0	 0	 Return	 Back
 Clear	 Exit	 Up	 Up
 Set	 Red	 Down	 Down
 Prog+	 Ch +	 Right	 Right









 





 

 



 



 

 





 



 








 

 
 
 


 

 











Original	Replacement	Original	Replacement
			
Left	Left	Input Select	AV
			
Enter	Ok	Chapter Mark	Format
			
Top Menu	Shift + Menu	Mark Erase	Pre Ch
			
←	Shift + Left	Synchro Rec	List
			
→	Shift + Right	Progressive	Guide
			
Menu	Menu		
			
I<<	I<<		
			
<</<I	<<		
			
I>/>>	>>		
			
>>I	>>I		
			
Play	Play		
			
Pause	Pause		
			
Stop	Stop		
			
Rec	Rec		
			
Rec Pause	Shift + Pause		
			
Rec Stop	Shift + Stop		
			
Rec Mode	Shift + Rec		





Original	Replacement	Original	Replacement
 Power	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Vol+	 Vol +
 HDD	 Media	 Vol-	 Vol -
 DVD	 Smart	 O))	 Dual
 1	 1	 [...]	 Subt
 2	 2	 Camera	 Yellow
 3	 3	 Tv/DVD	 TV/R
 4	 4	 Timer	 Shift + AV
 5	 5	 Display	 Info
 6	 6	 Time/Text	 Text
 7	 7	 System Menu	 D. Menu
 8	 8	 Title List	 Blue
 9	 9	 Tools	 Options
 0	 0	 Cursor Mode	 Green
 Clear	 Exit	 Return	 Back
 Set	 Red	 Up	 Up
 Prog+	 Ch +	 Down	 Down





Original	Replacement
	Right
	Left
	Ok
	+ Shift + Menu
	+ Shift + Left
	+ Shift + Right
	Menu
	I<<
	<</<I
	I>>>
	>>I
	Play
	Pause
	Stop
	Rec
	+ Shift + Pause
	+ Shift + Stop

Original	Replacement
	+ Shift + Rec
	AV
	Format
	Pre Ch
	List
	Guide

