



















Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer





Original	Replacement
 Text	 Text / Goto
 FAV / Sub Code	 Fav / Marker / PC
 TV / Reveal	 TV/Radio /
 Comp / Mix	 Display / Media
 Language	 Audio / Lang I/II
 Cancel	 Shift + Exit / Cancel / Clear
 Info	 Info / Angle
 Recall	 Back / Return
 Zoom	 Zoom / Size
 I / II	 Shift + Audio / Lang I/II

Original	Replacement

