 

 

 

 

 

 



 









 

 



 







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 AV / S / SCART	 AV / Input / RDS
 HDTV / PC / HDMI	 Shift + Fav / Marker / PC
 TV / DTV	 TV/Radio /
 Index / Select	 OK
 Guide / Sub Page	 Shift + Guide / EPG / -/-
 Teletext / Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 Menu	 Menu / Home
 Right	 Right
 Down	 Down

Original	Replacement
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 -/-	 Guide / EPG / -/-
 0	 0
 Return	 Back / Return
 Vol-	 Vol-
 Surround	 Eject / Surround





	Original	Replacement		Original	Replacement
	Wide	 Picture / Format			
	Sound	 Sound / Title			
	Display	 Display / Media			
	Subtitle	 Subtitle / EQ			
	Video Mode	 Setup / OPT /			
	Text	 Text / Goto			
	Info	 Info / Angle			
	Audio Mode	 Audio / Lang I/II			
	Favorites	 Fav / Marker / PC			
	List	 Smart / List			
	Hold	 Stop / Hold			

