











 






 




 
 




 
 








 








 



 




Original	Replacement	Original	Replacement
 Standby/On	 Power	 Navigation	 Pre Ch
 Open/Close	 Eject	 Menu	 Menu
 TV	 TV/R	 Setup	 Options
 DV	 Smart	 Title	 List
 AV	 AV	 Up	 Up
 Scan	 Media	 Down	 Down
 1	 1	 Select	 Ok
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Rec/OTR	 Rec
 5	 5	 Edit	 Guide
 6	 6	 Timer	 Shift +  AV Shift + AV
 7	 7	 Play	 Play
 8	 8	 Stop	 Stop
 9	 9	 Pause/Step	 Pause
 0	 0	 Mute	 Mute
 ADD/Clear	 Exit	 CH+	 Ch +





Original		Replacement		Original		Replacement	
	CH-		Ch -		Random		Yellow
	Vol+		Vol +		PS/IS		Format
	Vol-		Vol -		Goto		3D
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	Audio		Dual				
	Subtitle		Subt				
	Angle		Red				
	Disc Oper		Blue				
	Return		Back				
	Repeat		Text				
	Zoom		Shift + Eject				
	Slow		Shift + Play				
	Display		Info				
	Prog		Sleep				

