







 

 






 


 










Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop
	CH/Level Up		Ch +		<<		<<
	CH/Level Down		Ch -		>>		>>
	Vol+		Vol +		<<		<<
	Vol-		Vol -		>>		>>
	Mute		Mute		1		1
	Marker		Media		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	Enter		Ok		7		7
	Setup		Options		8		8
	Menu		Menu		9		9
	Display / Sleep		Info		0		0
	Display / Sleep		Sleep		6CH Dir		3D
	Return/Dimmer		Back		CH Sel		TV/R






Original	Replacement
 Adjust	 List
 Delay	 Exit
 P.Scan	 D. Menu
 T.Tone	 Text
 Auto	 Subt
 DSP	 AV
 Stereo	 Dual
 CD	 Green
 AUDIO	 Red
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 AUX Power /	 Shift + Power
 AUX P.Scan	 Shift + Smart

Original	Replacement
 AUX Rec	 Shift + Rec
 AUX Pause	 Shift + Pause
 AUX Play	 Shift + Play
 AUX Stop	 Shift + Stop
 AUX <<	 Shift + <<
 AUX >>	 Shift + >>
 AUX >>	 Shift + >>
 AUX <<	 Shift + <<





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH/Level +	 Ch +
 TV CH/Level -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Replacement
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD P.Scan	 Smart
 DVD T.Tone	 Options
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD Marker	 Pre Ch
 DVD Menu	 Menu
 DVD Up	 Up

Original	Replacement
 DVD Left	 Left
 DVD Enter	 Ok
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5





	Original	Replacement	
VIDEO1 6	DVD 6	6	6
VIDEO2 7	DVD 7	7	7
VIDEO3 8	DVD 8	8	8
9	DVD 9	9	9
0	DVD 0	0	0
POWER	SAT Power	SHIFT + 	Shift + Power
CH/LEVEL +	SAT CH/Level +	SHIFT + +	Shift + Ch +
CH/LEVEL -	SAT CH/Level -	SHIFT + -	Shift + Ch -
CH SEL.	SAT CH Sel.	SHIFT + APP MEDIA	Shift + Media
MUTE	SAT Mute	SHIFT + MUTE	Shift + Mute
VOLUME +	SAT Volume +	SHIFT + + VOL	Shift + Vol +
VOLUME -	SAT Volume -	SHIFT + - VOL	Shift + Vol -
TUNER 1	SAT 1	SHIFT + 1	Shift + 1
CD 2	SAT 2	SHIFT + 2	Shift + 2
AUX 3	SAT 3	SHIFT + 3	Shift + 3
TAPE 4	SAT 4	SHIFT + 4	Shift + 4
5	SAT 5	SHIFT + 5	Shift + 5

	Original	Replacement	
VIDEO1 6	SAT 6	SHIFT + 6	Shift + 6
VIDEO2 7	SAT 7	SHIFT + 7	Shift + 7
VIDEO3 8	SAT 8	SHIFT + 8	Shift + 8
9	SAT 9	SHIFT + 9	Shift + 9
0	SAT 0	SHIFT + 0	Shift + 0





	Original	Replacement	
	AUDIO	 Red	
	CD	 Green	
	AUX	 Yellow	
	TV	 Blue	
	VCR	 Shift + Red	
	SAT	 Shift + Blue	
	CABLE	 Shift + Yellow	
	DVD	 Shift + Green	
	CD P.Scan	 Smart	
	CD Pause	 Pause	
	CD Play	 Play	
	CD Stop	 Stop	
	CD I<<	 I<<	
	CD >>I	 >>I	
	CD 1	 1	
	CD 2	 2	
	CD 3	 3	

	Original	Replacement	
	CD 4	 4	
	CD 5	 5	
	CD 6	 6	
	CD 7	 7	
	CD 8	 8	
	CD 9	 9	
	CD 0	 0	
	VCR Power	 Shift + Power	
	VCR CH Sel.	 Shift + Media	
	VCR Rec	 Shift + Rec	
	VCR Play	 Shift + Play	
	VCR Mute	 Shift + Mute	
	VCR >>	 Shift + >>	
	VCR <<	 Shift + <<	
	VCR Volume -	 Shift + Vol -	
	VCR Volume +	 Shift + Vol +	
	VCR CH/Level +	 Shift + Ch +	



