




Original	Replacement	Original	Replacement
 Power	 Power	 Down	 Down
 Mute	 Mute	 PMode	 Format
 Exit	 Exit	 SMode	 Shift + Dual
 Goto / Text	 Text	 1	 1
 Audio / I/II	 Dual	 2	 2
 Display	 Info	 3	 3
 Sleep	 Sleep	 4	 4
 P-	 Ch -	 5	 5
 P+	 Ch +	 6	 6
 V-	 Vol -	 7	 7
 V+	 Vol +	 8	 8
 Source	 AV	 9	 9
 TV Menu	 Menu	 0	 0
 Up	 Up	 -/-- / +10	 Shift + Guide
 Left	 Left	 Recall / Prog	 Back
 Enter	 Ok	 Red / D.Setup	 Red
 Right	 Right	 Red / D.Setup	 Options





Original		Replacement		Original		Replacement	
	Green / A-B		Green		<< / FAV		Pre Ch
	Yellow / Angle		Yellow		>> / FAV+		>>
	Blue / Repeat		Blue		>> / FAV+	 + 	Shift + Right
	Blue / Repeat	 + 	Shift + Text		Eject / EPG		Guide
	Subtitle		Subt		Eject / EPG		Eject
	Pause/Play / Hold		Play		USB / SD		Media
	Pause/Play / Hold		Pause		Recorder		Rec
	Size		3D		CH List		List
	Reveal / D.Disp	 + 	Shift + Info		TV / Radio		TV/R
	D.Menu / Mix		D. Menu				
	Zoom / TXT Index	 + 	Shift + Eject				
	I<< / Subpage		I<<				
	>>I / Lang		>>I				
	>>I / Lang		Smart				
	Stop / FAV-		Stop				
	Stop / FAV-	 + 	Shift + Left				
	<< / FAV		<<				

