





 

 




 



 


 
 












 

 

 
 
 

 
 
 
 
 
 
 

 
 
 

 

 
 

 
 
 
 
 
 







 
 




 
 


Original	Replacement	Original	Replacement
	Power		Power
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Play		Play
	Pause		Pause
	Extra		MEDIA
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -
	Guide		-/-- / EPG
	CH+		CH +
	CH-		CH -
	Home		VOD

Original	Replacement	Original	Replacement
	Source		SRC
	TTX/MIX		TEXT
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		P/C / FAV
	Exit		EXIT
	Info		INFO
	Menu		MENU
	Red		Red (A)





Original	Replacement	Original	Replacement
Green	 Green (B)		
Yellow	 Yellow (C)		
Blue	 Blue (D)		
 123	 TV/R		
Tools	 OPT+		
Stop	 Stop		
Rec	 Rec		
<</ <<	 Rewind		
>>/>>	 Fast Forward		
CH List	 WIDE		
AD/Subt.	 Subt.		
E-Manual	 Audio		

