



| Original  | Replacement   |
|---|---|
|  Power       |  Power                         |
|  Mute        |  Mute / Dimmer                 |
|  1           |  1                             |
|  2           |  2                             |
|  3           |  3                             |
|  4           |  4                             |
|  5           |  5                             |
|  6           |  6                             |
|  7           |  7                             |
|  8           |  8                             |
|  9          |  9                            |
|  AV/Source |  AV / Input / RDS            |
|  0         |  0                           |
|  Exit      |  Exit / Cancel / Clear       |
|  -/--      |  Shift + Guide / EPG / -/-- |
|  CH+       |  CH+ / Page+                |
|  [i]/Info  |  Info / Angle               |

| Original   | Replacement   |
|--|---|
|  Vol+       |  Vol+                          |
|  CH-        |  CH- / Page-                   |
|  I-II       |  Audio / Lang I/II             |
|  Vol-       |  Vol-                          |
|  Up         |  Up                            |
|  Left       |  Left                          |
|  OK/Select  |  OK                            |
|  Right      |  Right                         |
|  Menu       |  Menu / Home                   |
|  Down       |  Down                          |
|  TV/DTV    |  TV/Radio /                   |
|  Red      |  Red / Netflix / Search      |
|  Green    |  Green / APP / Repeat        |
|  Yellow   |  Yellow / YouTube / Repeat   |
|  Blue     |  Blue / Prime Video / Random |
|  [=]/Text |  Text / Goto                 |
|  [=o]     |  Sleep / Timer               |



