 



 









 















 









 



 







 



 














 

 








 






















 





Original		Replacement		Original		Replacement	
	Power		Power		Text		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play/Pause/Hold		Play / Slow		Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop/Size		Stop / Hold		??		Info / Angle
	Rec Menu		Rec / Rec Mode		Left		Left
	<<		<< / Tune-		OK		OK
	>> / Cancel		>> / Tune+		Right		Right
	I<< / Index		I<< / Preset-		Exit		Exit / Cancel / Clear
	>>I/Reveal		>>I / Preset+		Down		Down
	Nicam		Audio / Lang I/II		Back		Back / Return
	Subtitle		Subtitle / EQ		Vol+		Vol+
	Aspect		Picture / Format		List		Smart / List
	Sleep		Sleep / Timer		CH+		CH+ / Page+
	Tv		TV/Radio /		Vol-		Vol-
	Subpage		D.Menu / Top		Display		Display / Media
	PC Auto		Setup / OPT /		CH-		CH- / Page-





Original	Replacement	Original	Replacement
	 1		DTV/Radio
	 2		Media
	 3		Shift + Guide / EPG / -/--
	 4		Repeat
	 5		Shift + Yellow / YouTube /
	 6		
	 7		
	 8		
	 9		
	 Guide / EPG / -/--		
	 0		
	 Fav / Marker / PC		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		
	 Shift + Pause / Step / Freeze		

