 





 

 





 







 







 

 













 



























 

| Original   | Replacement   |
|--|---|
|  Power      |  Power                   |
|  Sleep      |  Sleep / Timer           |
|  Mute       |  Mute / Dimmer           |
|  Source     |  AV / Input / RDS        |
|  1          |  1                       |
|  2          |  2                       |
|  3          |  3                       |
|  Audio/Lang |  Audio / Lang I/II       |
|  4          |  4                       |
|  5          |  5                       |
|  6         |  6                      |
|  Tv/Radio |  TV/Radio /            |
|  7        |  7                     |
|  8        |  8                     |
|  9        |  9                     |
|  Exit     |  Exit / Cancel / Clear |
|  CH.List  |  Smart / List          |

| Original   | Replacement   |
|--|---|
|  0                |  0                       |
|  Back             |  Back / Return           |
|  Menu             |  Menu / Home             |
|  CH-              |  CH- / Page-             |
|  Up               |  Up                      |
|  CH+              |  CH+ / Page+             |
|  Left             |  Left                    |
|  Enter            |  OK                      |
|  Right            |  Right                   |
|  Vol-             |  Vol-                    |
|  Down            |  Down                   |
|  Vol+           |  Vol+                  |
|  Setup          |  Setup / OPT /         |
|  Play/Timeshift |  Play / Slow           |
|  Pause          |  Pause / Step / Freeze |
|  Stop           |  Stop / Hold           |
|  Eject          |  Eject / Surround      |





| Original  | Replacement  |
|---|--|
|  Rec             |  Rec / Rec Mode           |
|  Text            |  Text / Goto              |
|  <<              |  << / Tune-               |
|  >>/Reveal       |  >> / Tune+               |
|  I<</Hold        |  I<< / Preset-            |
|  >>I/Sub.P       |  >>I / Preset+            |
|  SUB.T           |  Subtitle / EQ            |
|  Index/Title     |  Shift + Sound / Title    |
|  Size/Zoom       |  Zoom / Size              |
|  D.Menu          |  D.Menu / Top             |
|  EPG            |  Guide / EPG / -/--      |
|  FAV/Prog      |  Fav / Marker / PC      |
|  P.Mode/Lang   |  Picture / Format       |
|  S.Mode/Search |  Sound / Title          |
|  Info/Display  |  Info / Angle           |
|  Red/Angle     |  Red / Netflix / Search |
|  Green/Slow    |  Green / APP / Repeat   |

| Original  | Replacement   |
|---|---|
|  Yellow/A-B  |  Yellow / YouTube / Repeat   |
|  Blue/Repeat |  Blue / Prime Video / Random |

