



| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |






| Original | Replacement |
|------------------------|-------------------------------|
| Freeze | Pause / Step / Freeze |
| Guide | Guide / EPG / -/- |
| << | << / Tune- |
| >> / Aspect | >> / Tune+ |
| >> / Aspect | Shift + Picture / Format |
| << / Cancel | << / Preset- |
| << / Cancel | Shift + Exit / Cancel / Clear |
| >> / Sub.PG | >> / Preset+ |
| Stop / Index | Stop / Hold |
| Play/Pause / Timeshift | Play / Slow |
| Tv/Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | Eject / Surround |
| Size | Zoom / Size |
| Hold | Shift + Stop / |
| Text | Text / Goto |
| Red | Red / Netflix / Search |

| Original | Replacement |
|----------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Cyan | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



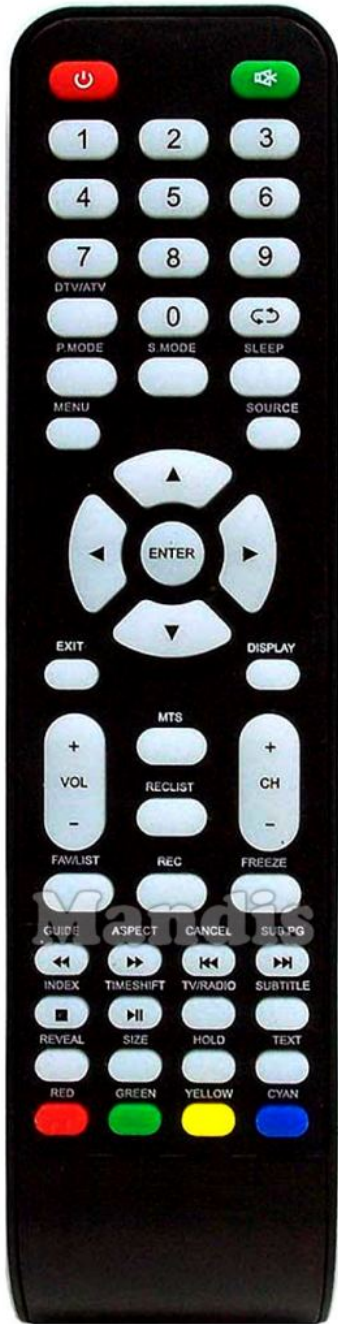

| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |





| | Original | Replacement | | Original | Replacement |
|---|------------------------|---|---|----------|---|
|  | Freeze |  Pause / Step / Freeze |  | Green |  Green / APP / Repeat |
|  | Guide |  Guide / EPG / -- |  | Yellow |  Yellow / YouTube / Repeat |
|  | << |  << / Tune- |  | Cyan |  Blue / Prime Video / Random |
|  | >> / Aspect |  >> / Tune+ | | | |
|  | >> / Aspect |  Shift + Picture / Format | | | |
|  | I<< / Cancel |  I<< / Preset- | | | |
|  | I<< / Cancel |  Shift + Exit / Cancel / Clear | | | |
|  | >>I / Sub.PG |  >>I / Preset+ | | | |
|  | Stop / Index |  Stop / Hold | | | |
|  | Play/Pause / Timeshift |  Play / Slow | | | |
|  | Tv/Radio |  TV/Radio / | | | |
|  | Subtitle |  Subtitle / EQ | | | |
|  | Reveal |  Eject / Surround | | | |
|  | Size |  Zoom / Size | | | |
|  | Hold |  Shift + Stop / | | | |
|  | Text |  Text / Goto | | | |
|  | Red |  Red / Netflix / Search | | | |

