




 









 

 

 





 

 

 
 


Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	CEC		Smart / List
	?		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





	Original	Replacement	Original	Replacement
	 PR-	 CH- / Page-		
	 I<	 I<< / Preset-		
	 >I	 >>I / Preset+		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		
	 [<>]	 Picture / Format		
	 Dialog	 Audio / Lang I/II		
	 [...]	 Subtitle / EQ		
	 Tv/Radio	 TV/Radio /		
	 My Media	 Display / Media		

