


 


 


 
 



Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Smart / List
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 TV/Radio /
	 Info / Angle
	 Audio / Lang I/II
	 Vol+

Original	Replacement
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Exit / Cancel / Clear
	 Shift + Guide / EPG / -/-





	Original	Replacement		Original	Replacement
	[≡]/Text	 Text / Goto			
	[≡0]	 << / Tune-			
	[≡+]	 >> / Tune+			
	[≡x]	 l<< / Preset-			
	[.≡]/[*]	 >> / Preset+			
	[≡♦]/[+]/Wide	 Picture / Format			
	[≡?]/PC	 Fav / Marker / PC			
	[≡i]/Guide	 Guide / EPG / -/--			

