





Original	Replacement
	Power
	Mute
	Play
	Pause
	Stop
	<<
	>>
	I<<
	>>I
	AD/Subt
	P.Size
	E-Manual
	Tools
	TTX/MIX
	Source
	Menu
	Up

Original	Replacement
	Info
	Left
	Enter
	Right
	Exit
	Down
	PRE-CH
	Vol+
	CH List
	PR+
	Vol-
	Media.P
	PR-
	1
	2
	3
	4





Original	Replacement	Original	Replacement
<b>5</b> 5	TAPE <b>5</b> 5		
<b>6</b> 6	TUNER <b>6</b> 6		
<b>7</b> 7	AUX - HDD <b>7</b> 7		
<b>8</b> 8	USB <b>8</b> 8		
<b>9</b> 9	BLUETOOTH <b>9</b> 9		
<b>GUIDE</b> Guide	GUIDE EPG <b>GUIDE</b> / EPG / -/--		
<b>0</b> 0	HDMI - SAT <b>0</b> 0		
<b>A</b> Red/A	NETFLIX SEARCH <b>A</b> Red / Netflix / Search		
<b>B</b> Green/B	APP REPEAT <b>B</b> Green / APP / Repeat		
<b>C</b> Yellow/C	YouTube REPEAT A-B <b>C</b> Yellow / YouTube / Repeat		
<b>D</b> Blue/D	Prime Video RANDOM <b>D</b> Blue / Prime Video / Random		
<b>RETURN</b> Return	SHIFT + RETURN BACK <b>RETURN</b> Shift + Back / Return		

Original	Replacement	Original	Replacement

