























 



 

 



 

 



 



 



 



 

 



 



 









| Original  |             | Replacement   |                       | Original  |          | Replacement   |                       |
|---|-------------|---|-----------------------|---|----------|---|-----------------------|
|    | Power       |    | Power                 |    | 9        |    | 9                     |
|    | PRO/TV/TXT  |    | TV/Radio /            |    | FAV      |    | Fav / Marker / PC     |
|    | Slow/Cancel |    | Shift + Play /        |    | 0        |    | 0                     |
|    | Rep/Reveal  |    | Shift + Back / Return |    | Recall   |    | Back / Return         |
|    | TV/AV       |    | AV / Input / RDS      |    | Vol+     |    | Vol+                  |
|    | <</Hold     |    | << / Tune-            |    | CH+      |    | CH+ / Page+           |
|    | >>/Size     |    | >> / Tune+            |    | Up       |    | Up                    |
|    | l<</Subpage |    | l<< / Preset-         |    | Left     |    | Left                  |
|    | >>l/Index   |    | >>l / Preset+         |    | OK       |    | OK                    |
|   | 1           |   | 1                     |   | Right    |   | Right                 |
|  | 2           |  | 2                     |  | Vol-     |  | Vol-                  |
|  | 3           |  | 3                     |  | Down     |  | Down                  |
|  | 4           |  | 4                     |  | CH-      |  | CH- / Page-           |
|  | 5           |  | 5                     |  | Menu     |  | Menu / Home           |
|  | 6           |  | 6                     |  | Exit     |  | Exit / Cancel / Clear |
|  | 7           |  | 7                     |  | Nicam/A2 |  | Text / Goto           |
|  | 8           |  | 8                     |  | Display  |  | Display / Media       |



