

 

 





 







 


 








 

 

 

 




 
 










 



 







 


 
 








 





 



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Open/Close		Eject / Surround		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Tv/DVD		Smart / List
	DVD		Shift + 2		0		0
	HDD		Shift + 7		Mute Tv		Mute / Dimmer
	AV		AV / Input / RDS		Vol- Tv		Vol-
	Av Tv		Shift + AV / Input / RDS		Display		Display / Media
	1		1		Text		Text / Goto
	2		2		Tv/Radio		Tv/Radio /
	3		3		Rec		Rec / Rec Mode
	PR+ Tv		CH+ / Page+		Zoom		Zoom / Size
	4		4		Repeat		Shift + Green / APP /
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+
	PR- Tv		CH- / Page-		I<<		I<< / Preset-
	7		7		>>I		>>I / Preset+
	8		8		Pause/Step		Pause / Step / Freeze





Original	Replacement
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 Up/PR+	 Up
 Menu/List	 D.Menu / Top
 Left	 Left
 Enter	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 Down/PR-	 Down
 Return	 Back / Return
 Red/FAV	 Red / Netflix / Search
 Green/Audio	 Green / APP / Repeat
 Yellow/Subtitle	 Yellow / YouTube / Repeat
 Blue/Timeshift	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Search	 Shift + Red / Netflix / Search

Original	Replacement
 Dubbing	 Audio / Lang I/II
 Clear	 Exit / Cancel / Clear
 Title	 Sound / Title
 Thumbnail	 Setup / OPT /
 Random	 Shift + Blue / Prime
 CHP.ADD	 Subtitle / EQ
 PIP	 Picture / Format

