 













 

 



 

 

 



 

 

 

 



 

 

 

 

 

 

 

 

 

 

 



 



 



 

 

 

 



 

 

 

 



 

 
 


 


 

 

 
 
 







Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 VCR	 Shift + 4
 Eject / Open / Close	 Eject / Surround
 AV Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH + Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH - Tv	 CH- / Page-
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol + Tv	 Vol +
 Clear	 Exit / Cancel / Clear
 0	 0
 Av Input	 AV / Input / RDS
 Vol - Tv	 Vol -
 << Backward	 << / Tune-
 >> Forward	 >> / Tune+
 << Skip	 << / Preset-
 >> Skip	 >> / Preset+
 Pause / Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 PR/CH Up / TRK+	 Up
 Disc Menu List	 D. Menu / Top
 Left	 Left
 Enter	 OK





Original		Replacement		Original		Replacement	
	Right		Right		TV / VCR		Smart / List
	Display		Display / Media		Timeshift		Sleep / Timer
	PR/CH		Down		*		TV/Radio /
	Return		Back / Return				
	Audio		Audio / Lang I/II				
	[...] / Subtitle		Subtitle / EQ				
	Zoom		Zoom / Size				
	I. Skip		Text / Goto				
	Rec		Rec / Rec Mode				
	Rec Mode	 + 	Shift + Rec / Rec Mode				
	Dubbing		Picture / Format				
	Title		Sound / Title				
	Play Mode		Setup / OPT /				
	Marker		Fav / Marker / PC				
	- Search		Red / Netflix / Search				
	Thumbnail		Green / APP / Repeat				
	CHP. ADD		Yellow / YouTube / Repeat				

