









 

 

 

 



 

 
























 







 






 



 



 





 

 

 

 

 

 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	TV System		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Text / Goto
	0		0
	Home		Menu / Home
	<</FR		<< / Tune-
	>>/FF		>> / Tune+
	Return		Back / Return
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	I<</Prev		I<< / Preset-
	Down		Down
	Vol+		Vol+
	Vol-		Vol-
	Option		Shift + Setup / OPT / Tools
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Repeat		Shift + Green / APP /
	Copy		Display / Media





	Original	Replacement	Original	Replacement
	Select	 Smart / List		
	Confirm	 Fav / Marker / PC		
	Info	 Info / Angle		
	Subtitle	 Subtitle / EQ		
	Slow	 Shift + Play /		
	Audio	 Audio / Lang I/II		
	Zoom	 Zoom / Size		
	Red/All	 Red / Netflix / Search		
	Blue/Music	 Blue / Prime Video / Random		
	Green/Photo	 Green / APP / Repeat		
	Yellow/Movie	 Yellow / YouTube / Repeat		

