













 

 















 





Original	Replacement
 Power Operate	 Power
 Eject	 Shift + Eject / Surround
 Open/Close	 Eject / Surround
 DVD/VCR	 Smart / List
 1	 1
 2	 2
 3	 3
 Timer Rec	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Input Select	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Replacement
 Return	 Back / Return
 Cancel	 Exit / Cancel / Clear
 Title Menu/Top	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Left	 Left
 TRK-	 Vol-
 OK	 OK
 Right	 Right
 TRK+	 Vol+
 DVD Menu	 D.Menu / Top
 Down	 Down
 CH-	 CH- / Page-
 Setup	 Setup / OPT /
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause/Still	 Pause / Step / Freeze





Original	Replacement
I<</Skip/Index-	I<< / Preset-
<</Search-	<< / Tune-
>>/Search+	>> / Tune+
>>I/Skip/Index	>>I / Preset+
One Touch	Picture / Format
CM Skip	Blue / Prime Video / Random
I> Slow	Shift + Play /
Rec/OTR	Rec / Rec Mode
Rec	Shift + Rec / Rec Mode
Dubbing	Sound / Title
Audio/Audio	Audio / Lang I/II
Zoom	Zoom / Size
A-B Repeat	Yellow / YouTube / Repeat
Zero Return	Fav / Marker / PC
Angle Counter	Info / Angle
Subtitle/ATR	Subtitle / EQ
Play Mode Repeat	Green / APP / Repeat

Original	Replacement
Clock/Counter	Guide / EPG / -/--
TV/VCR	TV/Radio /

