









 



 

















 


 















Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





	Original	Replacement		Original	Replacement
		CH+		CH+ / Page+	
		Info		Info / Angle	
		Vol+		Vol+	
		CH-		CH- / Page-	
		Mute		Mute / Dimmer	
		Vol-		Vol-	
		Rec		Rec / Rec Mode	
		Pause		Pause / Step / Freeze	
		I<<		I<< / Preset-	
		>>I		>>I / Preset+	
		<<		<< / Tune-	
		Play		Play / Slow	
		Stop		Stop / Hold	
		>>		>> / Tune+	
		Red/↑/Zoom		Red / Netflix / Search	
		Red/↑/Zoom		Zoom / Size	
		Green/↓/Repeat		Green / APP / Repeat	
		Yellow/Root		Yellow / YouTube / Repeat	
		Blue/Title		Blue / Prime Video / Random	

