



Original	Replacement
	 Power
	 Info
	 Mute
	 Dual
	 Ok
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 +  Shift + Guide
	 Exit

Original	Replacement
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<


 





Original		Replacement		Original		Replacement	
	>>		>>				
	[TV]		TV/R				
	D-Menu		Smart				
	TV		Media				
	AV		AV				
	P<P		Pre Ch				
	PP		D. Menu				
	[≡]		Text				
	[≡o]		Subt				
	[≡+]		Format				
	[≡x]		3D				
	[≡◆]/Wide		Shift + Format				
	[≡?]		Options				
	[≡i]/Guide		Guide				
	[:::]/Subtitle		Back				





Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info

Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info





Original		Replacement		Original		Replacement	
	Open/Close		Eject				
	Menu		Menu				
	Select		Ok				
	Up		Up				
	Down		Down				
	Left		Left				
	Right		Right				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				

