



| Original | Replacement | Original | Replacement |
|----------|-------------|----------|-------------|
|          | Power       |          | Power       |
|          | Mute        |          | Mute        |
|          | Up          |          | Up          |
|          | Down        |          | Down        |
|          | Right       |          | Right       |
|          | Left        |          | Left        |
|          | OK/Select   |          | Ok          |
|          | M           |          | Menu        |
|          | 1           |          | 1           |
|          | 2           |          | 2           |
|          | 3           |          | 3           |
|          | 4           |          | 4           |
|          | 5           |          | 5           |
|          | 6           |          | 6           |
|          | 7           |          | 7           |
|          | 8           |          | 8           |
|          | 9           |          | 9           |
|          | 0           |          | 0           |
|          | -/--        |          | Guide       |
|          | Exit        |          | Exit        |
|          | P<P/Swap    |          | Pre Ch      |
|          | Vol+        |          | Vol +       |
|          | Vol-        |          | Vol -       |
|          | P+          |          | Ch +        |
|          | P-          |          | Ch -        |
|          | PP          |          | Eject       |
|          | I-II        |          | Dual        |
|          | Tv/DTV      |          | TV/R        |
|          | [≡]         |          | Text        |
|          | [≡0]        |          | Options     |
|          | AV/Source   |          | AV          |
|          | [≡+]/[X]    |          | Format      |
|          | [≡X]/[■]    |          | 3D          |
|          | [.≡]/[■]    |          | Subt        |



