



| Original  | Replacement   |
|---|---|
|    |  Power                       |
|    |  Mute / Dimmer               |
|    |  Shift + Audio / Lang I/II   |
|    |  Shift + Picture / Format    |
|    |  Picture / Format            |
|    |  Sound / Title               |
|    |  1                           |
|    |  2                           |
|    |  3                           |
|    |  4                           |
|   |  5                          |
|  |  6                         |
|  |  7                         |
|  |  8                         |
|  |  9                         |
|  |  Shift + Guide / EPG / -/- |
|  |  0                         |

| Original  | Replacement   |
|---|---|
|    |  Back / Return               |
|    |  Display / Media             |
|    |  Pause / Step / Freeze       |
|    |  Rec / Rec Mode              |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Sleep / Timer               |
|    |  Up                          |
|   |  AV / Input / RDS           |
|  |  Left                      |
|  |  OK                        |
|  |  Right                     |
|  |  Down                      |
|  |  Menu / Home               |
|  |  Exit / Cancel / Clear     |



