

 
 

 
 
 
 
 
 






 


 



 

 

 








Original	Replacement	Original	Replacement
 Power	 Power	 ♪	 5 / Audio
 Mute	 Mute		
 Moon	 1 / Setup		
 Tv Arc.	 4 / Mode		
 Opt:	 7 / Rep		
 AUX	 Source		
 Vol+	 V+		
 Vol-	 V-		
 Bass+	 +		
 Bass-	 -		
 Voice+	 Up		
 Voice-	 Down		
 Play	 Play / Band		
 I<	 I<		
 >I	 >I		
 Videocamara	 9 / Disp		
 Playing	 8 / A-B		

