




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Eject	 Eject / Surround	 Home	 Shift + Menu /
 1	 1	 Back	 Back / Return
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Stop	 Stop / Hold
 8	 8	 Play/Pause	 Play / Slow
 9	 9	 Info	 Info / Angle
 X/ Shuffle	 AV / Input / RDS	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 Repeat	 Shift + Green / APP / REPEAT	 I<<	 I<< / Pre-set-
 Vol-	 Vol-	 >>I	 >>I / Pre-set+
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 Vol+	 Vol+	 Green	 Green / APP / Repeat

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 TV
 Eject	 Eject	 DVD	 DVD
 1	 1	 SAT	 SAT
 2	 2	 AUX	 AUX
 3	 3	 SLOW	 SLOW
 4	 4	 STEP-FREEZE	 STEP-FREEZE
 5	 5	 HOLD	 HOLD
 6	 6	 REC MODE	 REC MODE
 7	 7	 TUNE-	 TUNE-
 8	 8	 TUNE+	 TUNE+
 9	 9	 PRESET-	 PRESET-
 X/ Shuffle	 X/ Shuffle	 PRESET+	 PRESET+
 0	 0	 TITLE	 TITLE
 Repeat	 Repeat	 LANG	 LANG
 Vol-	 Vol-	 EQ	 EQ
 Mute	 Mute	SURROUND	SURROUND
Vol+	Vol+	SOUND	SOUND
		AUDIO	AUDIO
		SUBTITLE	SUBTITLE
		TIMER	TIMER
		PROGRAM	PROGRAM
		TV RADIO	TV RADIO
		RDS	RDS
		AV INPUT	AV INPUT
		HOME	HOME
		ANGLE	ANGLE
		MENU	MENU
		INFO	INFO
		CLEAR	CLEAR
		EXIT	EXIT
		CANCEL	CANCEL
		LIST	LIST
		SMART	SMART
		MEDIA	MEDIA
		DISPLAY	DISPLAY
		TV	TV
		DVD	DVD
		CD-STB	CD-STB
		1	1
		2	2
		3	3
		VIDEO	VIDEO
		TAPE	TAPE
		TUNER	TUNER
		AUX-HDD	AUX-HDD
		USB	USB
		BLUETOOTH	BLUETOOTH
		7	7
		8	8
		9	9
		HDMI-BAT	HDMI-BAT
		PC	PC
		GUIDE	GUIDE
		EPG	EPG
		0	0
		FAV MARKER	FAV MARKER
		NETFLIX	NETFLIX
		APP	APP
		YouTube	YouTube
		Prime Video	Prime Video
		SEARCH	SEARCH
		REPEAT	REPEAT
		REPEAT A-B	REPEAT A-B
		RANDOM	RANDOM
		Mandis SHOP	Mandis SHOP
		www.mandis.tv	www.mandis.tv



