 



















 







 







 



 







 























Original		Replacement		Original		Replacement	
	Input		AV / Input / RDS		ATV/DTV		TV/Radio /
	Power		Power		Vol+		Vol+
	[▼]		Fav / Marker / PC		[≡i]/[i+]		Info / Angle
	Text		Text / Goto		PR+		CH+ / Page+
	Subtitle		Subtitle / EQ		Vol-		Vol-
	O)/I/II		Audio / Lang I/II		Mute		Mute / Dimmer
	1		1		PR-		CH- / Page-
	2		2		Quick		Smart / List
	3		3		Guide		Guide / EPG / -/-
	4		4		Up		Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Menu		Menu / Home
	AD		Sound / Title		Down		Down
	0		0		Return		Back / Return





Original		Replacement	
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡?]		Display / Media
	[≡+]		Stop / Hold
	[≡◇]		Zoom / Size
	Timer/[≡x]		Sleep / Timer

Original	Replacement

