


 
 

 


 





 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 FAV/List	 Dual
 Recall	 Pre Ch	 Freeze	 Options
 Source	 AV	 Tv/Radio	 TV/R
 Menu	 Menu	 Rec	 Rec
 P.Mode	 Shift + Format	 Red	 Red
 S.Mode	 Shift + Dual	 Green	 Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Cyan		Blue				
	<</Guide		<<				
	>>/Aspect		>>				
	<</Cancel		Shift + Subt				
	>>/Sub.Pg		Back				
	Stop/Index		Stop				
	Play/Pause/Time Shift		Play				
	Subtitle		Subt				
	Text		Text				
	Reveal		Shift + Options				
	Size		Format				
	Hold		Eject				
	DTV/ATV		Info				
	Rec List		D. Menu				
	Sleep		Sleep				
	MTS		Shift + Sleep				

