



 





 





 





 















 
 








 























Original	Replacement	Original	Replacement
 Power On	 Power	 Clear	 Exit / Cancel / Clear
 Off	 Shift + Power	 0	 0
 Dimm/Dimmer	 Mute / Dimmer	 SRCH/Search	 Shift + Red / Netflix /
 Open/Close	 Eject / Surround	 Red	 Red / Netflix / Search
 A-B/A-B Repeat	 Shift + Yellow / YouTube /	 Green	 Green / APP / Repeat
 1	 1	 Yellow	 Yellow / YouTube / Repeat
 2	 2	 Blue	 Blue / Prime Video / Random
 3	 3	 T/Top Menu	 D.Menu / Top
 Repeat	 Shift + Green / APP /	 M/Menu/Pop Up	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Enter	 OK
 Rand/Random	 Shift + Blue / Prime	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 S/Setup	 Setup / OPT /
 9	 9	 R/Return	 Back / Return
 Zoom	 Zoom / Size	 Angle	 Info / Angle





	Original	Replacement	Original	Replacement
	Subtitle	Subtitle / EQ		
	Audio	Audio / Lang I/II		
	Pure Direct	Text / Goto		
	Display	Display / Media		
	Mode	Picture / Format		
	I<< Skip	I<< / Preset-		
	Skip >>I	>>I / Preset+		
	Stop	Stop / Hold		
	Play	Play / Slow		
	<<	<< / Tune-		
	Still/Pause	Pause / Step / Freeze		
	>>	>> / Tune+		

