





















 







 




 








 




















 


















Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 Sleep	 Sleep / Timer	 Left	 Left
 Program	 TV/Radio /	 3D AI	 Picture / Format
 Cancel	 Exit / Cancel / Clear	 Right	 Right
 1	 1	 CH Select	 Smart / List
 2	 2	 Down	 Down
 3	 3	 AV Effect	 AV / Input / RDS
 Disc	 Shift + 2	 Test	 Text / Goto
 4	 4	 Pro Logic	 Audio / Lang I/II
 5	 5	 Super Surround	 Eject / Surround
 6	 6	 Simulated Stereo	 Sound / Title
 +10/-/-	 Guide / EPG / -/-	 VCR/AUX/6CH	 Shift + 7
 7	 7	 Tape/Deck 1/2	 Shift + 5
 8	 8	 CD	 Shift + 3
 9	 9	 Tuner/Band	 Shift + 6
 0	 0	 </II	 Pause / Step / Freeze
 EQ	 Subtitle / EQ	 Stop	 Stop / Hold





Original	Replacement
 Play	 Play / Slow
 Muting	 Mute / Dimmer
 <<</>><<	 << / Tune-
 >>>/>>>	 >> / Tune+
 Vol-	 Vol-
 Vol+	 Vol+

Original	Replacement

