





 

 



 



 



 



 

 











 
 


 
 


 

 

 
 


 



 

 

 









Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS	 [i+]/[? ]	 Info / Angle
 Power	 Power	 Left	 Left
 Theatre	 TV/Radio /	 OK	 OK
 <</<	 << / Tune-	 Right	 Right
 Play	 Play / Slow	 Return	 Back / Return
 >>/ >	 >> / Tune+	 Down	 Down
 Sync Menu	 D.Menu / Top	 Options	 Setup / OPT /
  <<	  << / Preset-	 Home	 Menu / Home
 Stop	 Stop / Hold	 Red	 Red / Netflix / Search
 >>	 >>  / Preset+	 Green	 Green / APP / Repeat
 ?/i-Manual	 Shift + Info / Angle	 Yellow	 Yellow / YouTube / Repeat
 Scene	 Picture / Format	 Blue	 Blue / Prime Video / Random
 [+]	 Smart / List	 1	 1
 Digital/Analog	 Display / Media	 2	 2
 ♥	 Fav / Marker / PC	 3	 3
 Guide	 Guide / EPG / -/--	 4	 4
 Up	 Up	 5	 5



