



 
 


 

 
 


 



 

 
 
 

 

 
 




 

 




 
 
 




 

 



 
 



 


 
 










Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 EPG	 Guide
 0	 0	 Info	 Info
 FAV	 Shift + Pre Ch	 Mute	 Mute
 Recall	 Pre Ch	 Picture	 Shift + Format
 Tv/TXT	 Text	 Audio	 Dual
 Input	 AV	 Subtitle	 Subt
 Vol+	 Vol +	 ECO/TFT Off	 Media
 Vol-	 Vol -	 Sound	 Sleep





Original		Replacement		Original	Replacement
	Pause/TS		Pause		
	Play		Play		
	Record		Rec		
	Stop		Stop		
	Play/List		3D		
	CH/List		Format		
	Blue/Sleep		Blue		
	Yellow		Yellow		
	Green		Green		
	Red		Red		
	Goto/Cancel		Options		
	Rep/Reveal		List		
	<</Hold		<<		
	>>/Size		>>		
	I<</Subpage		I<<		
	>>I/Index		>>I		

