

 





Original	Replacement
 Power	 Power
 Tv/TXT	 Text
 Play/Pause/Cancel	 Play
 <</Hold	 <<
 >>/Size	 >>
 I<</Subpage	 I<<
 >>I/Index	 >>I
 INput	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 REP/Reveal	 Smart
 Recall	 Pre Ch
 -/--	 Shift + Guide
 Right	 Right
 Left	 Left
 Up	 Up
 Down	 Down
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Exit	 Exit
 Mute	 Mute
 Nicam/A2	 Dual





Original	Replacement	Original	Replacement
DISPLAY	Display	SHIFT + DISPLAY	Shift + Info
PICTURE	Picture	SHIFT + PICTURE	Shift + Format
SOUND	Sound	SHIFT + SOUND	Shift + Dual
SLEEP	Sleep	PROG SLEEP	Sleep
SUBTITLE	Subtitle	AD SUBT	Subt
EPG	EPG	-/-- GUIDE	Guide
FAV	FAV	SHIFT + FAV	Shift + Pre Ch
INFO	Info	DISPLAY INFO	Info
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R
CH/LIST	CH/List	SETTINGS OPT	Options
ASPECT	Aspect	PICTURE FORMAT	Format
DTV	DTV	REC MODE	Rec
Red	Red	A	Red
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue

Original	Replacement

