



 

 



 















 


 
















 









Original	Replacement	Original	Replacement
	Power		Swap
	Mute		Back / Return
	Hold		Vol+
	Sound / Title		Smart / List
	Subtitle / EQ		CH+ / Page+
	Picture / Format		Vol-
	TV/Radio /		CH- / Page-
	D.Menu / Top		1
	Setup / OPT /		2
	Text / Goto		3
	AV / Input / RDS		4
	Menu / Home		5
	Up		6
	Left		7
	OK		8
	Right		9
	Down		0
			Guide / EPG / -/--
			HDMI - BAT 0





	Original	Replacement		Original	Replacement
		 Fav / Marker / PC			
		 Red / Netflix / Search			
		 Green / APP / Repeat			
		 Yellow / YouTube / Repeat			
		 Blue / Prime Video / Random			
		 Shift + OK			
		 Shift + Back / Return			
		 Shift + 0			

