 



 


 
 
 


 

 

 

 

 

 







 
 






Original	Replacement
 Source	 Shift + AV / Input / RDS
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/-
 FAV	 Fav / Marker / PC

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Info	 Info / Angle
 Vol+	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 Red/O Lang	 Red / Netflix / Search





Original	Replacement	Original	Replacement
Red/O) Lang	Audio / Lang I/II		
Green/Subtitles	Subtitle / EQ		
Green/Subtitles	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Violet/Text	Text / Goto		
Stop Text	Shift + Stop /		
??? Text	Sleep / Timer		
Zoom Text	Zoom / Size		
Media/Digital	Display / Media		
<<	<< / Tune-		
Play	Play / Slow		
>>	>> / Tune+		
T-Link	D.Menu / Top		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		





Original	Replacement		
	Power		Power
	List		Smart / List
	TV		Shift + 1
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0/--		Shift + Guide / EPG / -/--
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home

Original	Replacement		
	Up		Up
	Left/Zoom-		Left
	OK		OK
	Right/Zoom+		Right
	Down		Down
	Guide		Guide / EPG / -/--
	Return		Back / Return
	Info		Info / Angle
	Vol+ Tv		Vol+
	Presets		Setup / OPT /
	PR+		CH+ / Page+
	Vol- Tv		Vol-
	PR-		CH- / Page-
	Mute Tv		Mute / Dimmer
	Red(O) Lang		Audio / Lang I/II
	Red(O) Lang		Red / Netflix / Search
	Subtitles		Subtitle / EQ





Original	Replacement	Original	Replacement
 Green/Subtitles	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet/Text	 Text / Goto		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		





Original	Replacement
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	Shift + Guide / EPG / --
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / --
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
PR +	CH+ / Page+
Vol -	Vol-
PR -	CH- / Page-
Mute	Mute / Dimmer
Red / A-B	Shift + Yellow / YouTube /
Red / A-B	Red / Netflix / Search





Original		Replacement		Original	Replacement
	Green / Subtitles		Green / APP / Repeat		
	Green / Subtitles		Subtitle / EQ		
	Yellow / Size		Yellow / YouTube / Repeat		
	Yellow / Size		Zoom / Size		
	Blue / Lang		Blue / Prime Video / Random		
	Blue / Lang		Audio / Lang I/II		
	Purple / Text		Text / Goto		
	Text Stop		Shift + Stop /		
	Text ???		Sleep / Timer		
	Text Zoom		Shift + Zoom /		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		

