










 

 



 









 









 



 












 




 




 


 
 
 





 



 

 



 




 
 





 
 
 






Original		Replacement		Original		Replacement	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red





Original	Replacement
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Info	 Info
 Subtitle	 Subt
 Text	 Text
 Tv/Radio	 Sleep
 FAV List	 Pre Ch
 Marker	 Shift + Options
 Rec	 Rec
 Audio	 Dual
 Rec Mode	 Shift + Rec
 Rec	 Format
 Repeat	 Shift + Text
 OK	 Ok
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 USB	 Shift + Media
 Timer	 Shift + AV
 HDD	 Shift + Smart












 

 



 



















 



 

 










 
 







 
 

 





	Original	Replacement	Original	Replacement
	Input Sel		AV	AV
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	Prog+		Ch +	Ch +
	Prog-		Ch -	Ch -
	Standby/On TV		Power	Power
	Mute Tv		Mute	Mute
	Tv Vol+		Vol +	Vol +
	Tv Vol-		Vol -	Vol -

 
 
 

 

 
 
 
 



 





 

 
 


Original	Replacement	Original	Replacement
 Standby/On	 Power	 <<	 <<
 1	 1	 >>	 >>
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue





Original	Replacement
	 Guide
	 Info
	 Subt
	 Text
	 D. Menu
	 Pre Ch
	 Shift + Options
	 Rec
	 Dual
	 Shift + Rec
	 Format
	 Shift + Text
	 Ok
	 Up
	 Down
	 Right
	 Left

Original	Replacement
	 Shift + Media
	 Shift + AV
	 Shift + Smart

