



 

































 










Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	Home		Yellow / YouTube / Repeat
	Guide		Blue / Prime Video / Random
	UP		1
	I<		2
	OK		3
	Right		4
	Down		5
	Back		6
	Option		7
	III		8
	Vol+		9
	Mute		Subtitle / EQ
	Vol-		0
	Red		Picture / Format
	Power		
	Menu / Home		
	Guide / EPG / -/--		
	Up		
	I<< / Preset-		
	OK		
	Right		
	Down		
	Back / Return		
	Setup / OPT /		
	Smart / List		
	Vol+		
	Mute / Dimmer		
	Vol-		
	Red / Netflix / Search		

