



Original	Replacement
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Tv/VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
OK/Enter	OK









Original	Replacement
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Tv7VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
K/Enter	OK



